Lenco

XEMIO-3530

30GB Portable Media Player with 3.5" TFT LCD and CF Card Slot

INSTRUCTION MANUAL

Please read this manual carefully before operation.

For information and support, www.lenco.eu

PRECAUTIONS

CAUTION

WARNING: SHOCK HAZARD. DO NOT OPEN.
AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

For Customer Use:
Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.

Model No. XEMIO-3530

Serial No. _____

For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

PRECAUTIONS

WARNING:
To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:
To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

Protect your hearing:
Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. Water and Moisture: Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

10. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

IMPORTANT SAFETY INSTRUCTIONS

12. Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
14. Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
15. Lightning: For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
16. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
17. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
21. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
23. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

TABLE OF CONTENTS

PRECAUTIONS **2**

IMPORTANT SAFETY INSTRUCTIONS **4**

TABLE OF CONTENTS **7**

PACKAGE CONTENTS **10**
Left View 12
Top View 12
Right View 12
Bottom View 12

GETTING STARTED **13**
Charging Your PMP 13
Turning Your PMP On/Off 13
Hold Switch (Key Lock) 13
Resetting Your PMP 14

MAIN MENU OVERVIEW **15**

BASIC OPERATIONS **16**
Menu Interface Navigation 16
Basic Playback Controls 16
- Music Controls 16
- Video Controls 17

Other Playback Controls 17
- Standard Playback Controls 17
- Sound Options 18
- Display Options 18

Adjusting the Volume 18

MUSIC MODE **19**
Music File Browser 19
Music Mode Options 20
- Program 20
- Random 20
- Record 21

TABLE OF CONTENTS

Last Play 21
Playlist 21
Additional Music Playback Controls 22
Music Show 22
Info 22

VIDEO MODE 23
Video File Browser 23
Video Mode Options 24
Play All 24
Program 24
Random 24
Last Play 24
Video Output 24
Additional Video Playback Controls 25
Size 25
Zoom 25
Move 26

PHOTO MODE 27
Photo File Browser 27
Photo Mode Options 28
Preview 28
Slide Show 28
Refresh 28
Music Show 29
Last Play 29
Additional Photo Playback Controls 30
Rotate 30
Zoom 30
Move 30
Slide Duration 31

RADIO MODE 32
Radio Station Preset Browser 32
Radio Playback Controls 32
Preset 32

TABLE OF CONTENTS

Manual Search Backward/Forward 33
Step Scan Backward/Forward 33
Stereo/Mono Switch 33

BROWSER MODE 34
File Browser 34
Browser Mode Controls 34
Copy 34
Delete 35
Move 35
Refresh 35

SETUP MODE 36
Setup Menu 36
Language 36
Display 36
Sound 37
System 37
Power 37

CABLE CONNECTION 38
Composite Video or S-Video Output 38
Component Video Output 38
Audio-Only Output 39

COMPUTER CONNECTION (USB) 40
USB Driver Installation (Required for Windows 98 SE Only) 40
Connecting to a Computer 40
Transferring Files 41
Disconnecting from a Computer 42

RESTORE & FIRMWARE UPGRADES 43
Restoring Your PMP (Format) 43

ABOUT DIGITAL MUSIC FILES (MP3S) 45

TROUBLESHOOTING 49

SPECIFICATIONS 51

PACKAGE CONTENTS

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

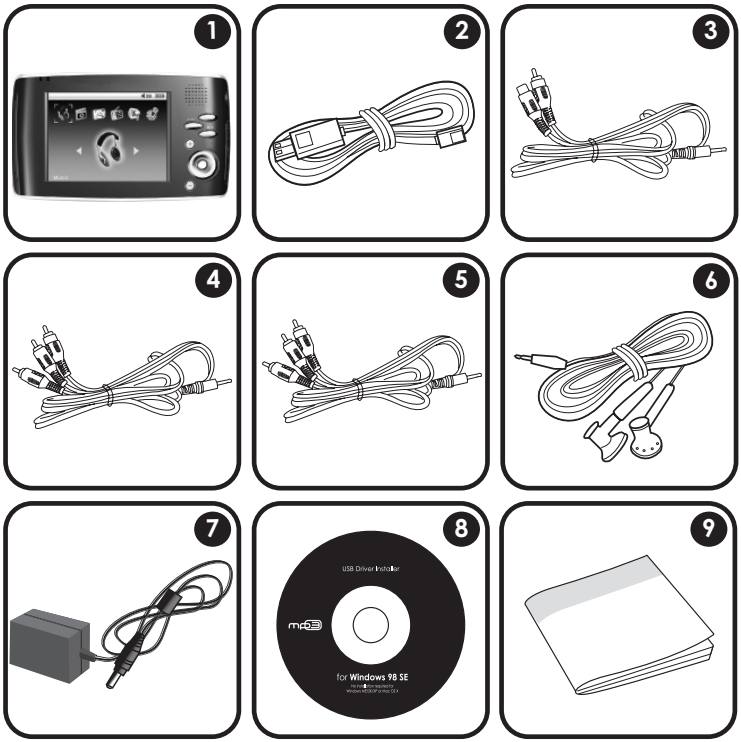

1. Lenco XEMIO-3530
2. USB Cable
3. S-Video Cable
4. RCA Audio Cable
5. RCA Composite Video Cable
6. Professional Stereo Earphones
7. AC Adapter
8. Installation CD
9. Manual

FEATURES

- 30GB Hard Disk
- 3.5” TFT LCD Color Display
- Compact Flash Card Slot for Easy Memory Capacity Upgrades (CF Card Not Included)
- User-Friendly Interface
- Plays Music, Video, Photo, and Text
- Line-In Jack for Recording from External Audio Devices (No PC Required)
- Integrated FM Radio and Recorder
- Integrated Microphone for Digital Voice Recording
- Integrated Speaker
- ID3 and LRC support for song and synchronized lyric information display.
- USB 2.0 for Ultra-Fast File Transfers (up to 40x faster than USB 1.0)
- Plug-and-Play support for Windows 98 SE/2000/ME/XP and Macintosh OS X
- Rechargeable Lithium Polymer Battery
- Upgradable Firmware

LOCATION OF CONTROLS

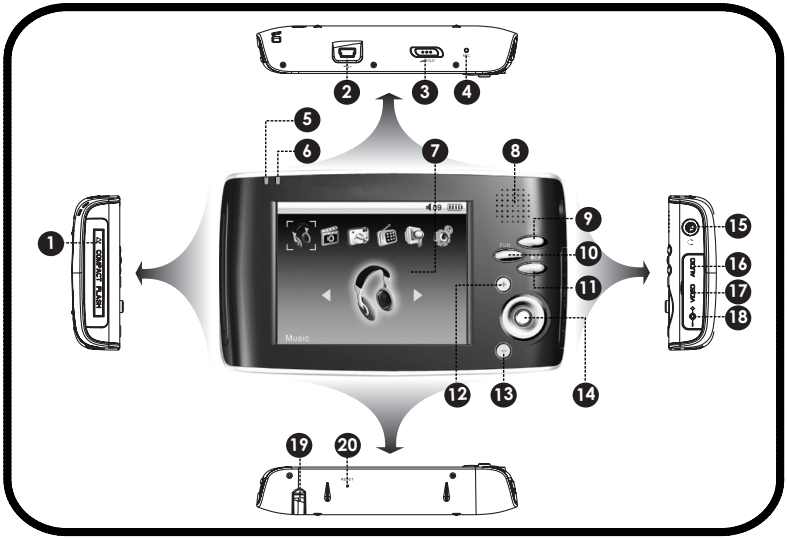

Left View

1. Compact Flash Card Slot

Top View

2. USB 2.0 Port
3. Hold Switch
4. Microphone
5. Charge Indicator
6. Power Indicator
7. 3.5" TFT LCD Display
8. Speaker
9. Power ⏻ / RESET
10. Function FUNCTION
11. Stop/Return STOP / ⮥
12. Volume +
13. Volume -
14. **Navigation Joystick:**
    Press for "OK"

Right View

15. Headphone Jack
16. Audio Out Jack
17. Video Out Jack
18. Power Jack

Bottom View

19. Stand
20. Reset Key

GETTING STARTED

Charging Your PMP

Your PMP has an integrated rechargeable battery.

- Plug one end of the supplied power adapter into the PMP's DC 5V Power Jack and plug the other end into a 100-240V wall outlet.

The battery should be charged fully (minimum 4 hours) before its initial use to ensure optimum lifetime performance.

The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, incinerate, or heat the battery.

Do not connect the power plug to a power outlet other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

Use only AC adapters of the type specified here. Failure to do so may case a fire or damage the player.

Turning Your PMP On/Off

- To turn the PMP on, press and hold ⏻ / RESET until you see the "Lenco" Screen.
- To turn the PMP off, press and hold ⏻ / RESET until the PMP turns off.

Hold Switch (Key Lock)

The Hold feature disables your PMP's controls to prevent accidental key presses when it is in your pocket or bag.

- To lock the PMP, slide the Hold switch to the left. A Lock icon will appear on-screen.
- To unlock the PMP, slide the Hold switch to the right.

Resetting Your PMP

Reset your PMP if it should freeze and not respond or otherwise malfunction.

1. If the PMP is connected to a computer, disconnect it.
2. Connect your PMP to a 100-240V wall outlet with the supplied power adapter to ensure that your PMP has power.
3. Press and hold ⏻ / RESET until the PMP turns off. If this does not work, use a pin to press the reset key located on the bottom of the PMP.

MAIN MENU OVERVIEW

The Main Menu gives you access to the different function modes of your PMP.

To select a mode, press ◀ or ▶ to highlight the mode with the Selection Cursor and then press OK.

To return to the Main Menu at any time, press and hold the Joystick [OK].

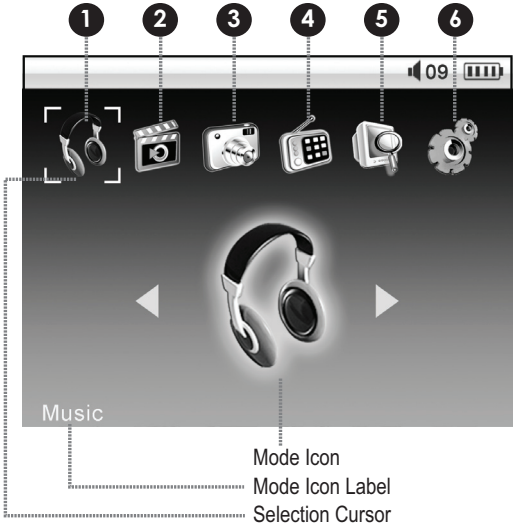

1. **Music**

Play your digital music files (MP3, WMA, and OGG).

Record through the microphone.

2. **Video**

Watch your digital video files (AVI, MPEG-1, -2, and -4, H.264, and XviD).

3. **Photo**

View your digital picture files (JPG).

4. **Radio**

Listen to FM Radio broadcasts.

5. **Browser**

View and organize your media library.

6. **Setup**

Change the internal settings of your PMP.

BASIC OPERATIONS

Menu Interface Navigation

To select the different menu options and files on your PMP:

- Use the Navigation Joystick to move the cursor. The cursor highlights the current selection.
  - Press ▲ to move the cursor up
  - Press ▼ to move the cursor down.
  - Press ◀ to move the cursor left.
  - Press ▶ to move the cursor right.
- Press and hold the Joystick in one direction to scroll quickly in that direction.
- Press the Joystick [OK] to confirm the highlighted selection.
- Press STOP / ⤴ to return to the previous screen. Press STOP / ⤴ repeatedly to return to the Main Menu.

Basic Playback Controls

Music Controls

1. Select and confirm MUSIC from the Main Menu.
2. Use the Joystick to select a track from the File Browser list.
3. Press OK to play the track. During playback:
   - Press OK to pause playback; press OK again to resume playback.
   - Press and hold ▶ to fast forward through the current track.
   - Press and hold ◀ to reverse through the current track.
   - Press ▼ to play the next track in the File Browser list.
   - Press ▲ to play the previous track in the File Browser list.
   - Press STOP / ⤴ to return to the File Browser list.

Video Controls

1. Select and confirm VIDEO from the Main Menu.
2. Use the Joystick to select a video from the File Browser list.
3. Press OK to play the video. During playback:
   - Press OK to pause playback; press OK again to resume playback.
   - Press and hold ▶ to fast forward through the current video.
   - Press and hold ◀ to reverse through the current video.
   - Press ▼ to play the next video in the File Browser list.
   - Press ▲ to play the previous video in the File Browser list.
   - Press STOP / ⮌ to return to the File Browser list.

Other Playback Controls

During music, video, or photo playback:

- Press FUNCTION once to display the playback control options on-screen. Use the Joystick to select a control and then press OK.
- Press FUNCTION twice to access the Sound Control Options
- Press FUNCTION three times to access the Display Control Options.

Standard Playback Controls

These controls are available in Music, Video, and Photo Modes. Please see the Music Mode, Video Mode, and Photo Mode sections for information about additional controls available under each respective mode.

⏮ Previous: Play previous file

⏭ Next: Play next file

⏯ Play/Pause: Start or pause playback

↻ Repeat: Press OK once for REP-1 (repeat current file), press OK twice for REP-ALL (repeat all files).

ℹ Information: Show file infomation.

Sound Options

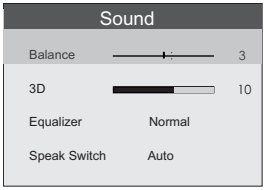

Change the Sound Options to set the way your PMP processes audio signals.

1. During music playback, press FUNCTION twice. The SOUND option screen will appear.
2. To adjust the settings:
   - Press ▲ or ▼ to select a setting.
   - Press ◀ or ▶ to adjust the selected setting.

Display Options

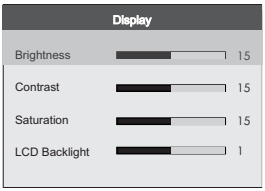

Change the Display Options to adjsut the LCD screen settings.

1. During music playback, press FUNCTION twice. The DISPLAY option screen will appear.
2. To adjust the settings:
   - Press ▲ or ▼ to select a setting.
   - Press ◀ or ▶ to adjust the selected setting.

Adjusting the Volume

During playback:

- Press + to raise the volume level
- Press − to lower the volume level.

Set the volume to the lowest level before headphone use to avoid damage to your hearing or to your headphones.

MUSIC MODE

Enter Music mode to play your MP3, WMA or, OGG audio files.

Music File Browser

Select and confirm the MUSIC icon in the Main Menu. The File Browser that appears will display all available music files in the **"my_music"** folder.

- Use the Joystick to select a folder and press OK to display its contents. Press STOP / ⮥ to return to a previous folder.
- Use the Joystick to select a music file and press OK to play.

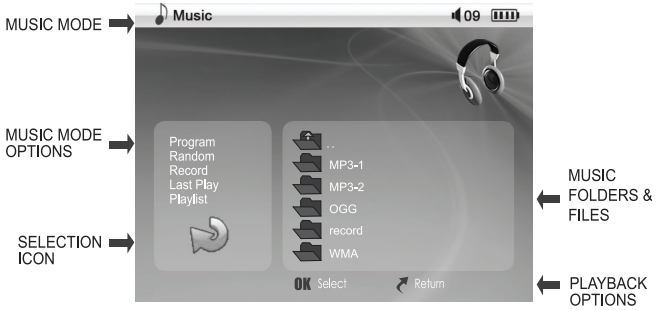

MUSIC MENU SCREEN

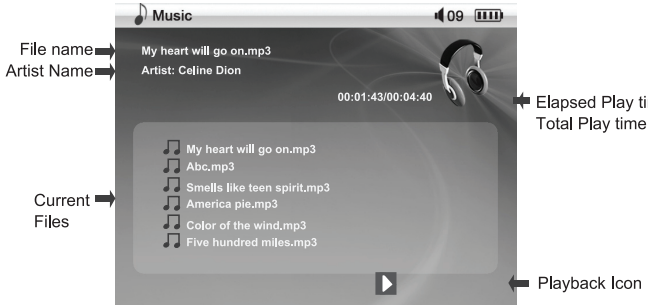

MUSIC PLAYBACK SCREEN

Refer to the Basic Operations section for basic music playback control information.

Music Mode Options

The Music Mode options are displayed on the left side of the Music Menu screen.

Program

Add your favorite audio tracks to a Program List for playback.

1. Select PROGRAM from the Music Mode options and press OK to confirm.
2. Select an audio track (or an entire folder) and press ▶ to add it to the Program

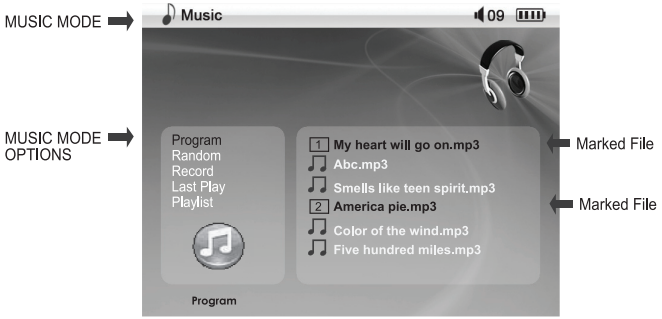

PROGRAM SCREEN

List. The track or folder will be marked with a number.

3. To remove a marked track or folder from the Program List, select the marked item and press ◀.
4. Press FUNCTION to start Program playback when you have finished adding tracks to the list.
5. Press STOP / ⏏ to exit Program mode.

Random

Play tracks in random (shuffled) order.

1. Select RANDOM from the Music Mode options and press OK to confirm.
2. The tracks will be played in random order and “RND” will appear on the upper-left corner of the screen.
3. Press STOP / ⏏ to exit Random mode.

Record

Make digital voice recordings through the integrated microphone. Recordings are saved to the folder path **"my_music > record"**.

1. Select RECORD from the Music Mode options and press OK to confirm.
2. Press and hold OK to start recording.
3. Press STOP / ⤴ to stop recording.
4. Press STOP / ⤴ to exit Program mode.

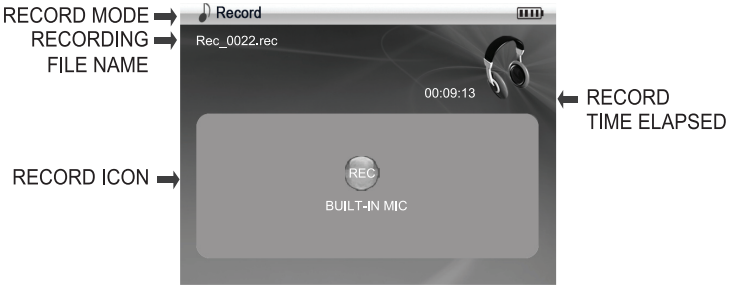

RECORDING SCREEN

Last Play

Play the audio track that was played last.

1. Select LAST PLAY from the Music Mode options and press OK to confirm.

Playlist

Select a playlist for playback.

Playlists are an easy way to organize and store your favorite music mixes so you can listen to them whenever you want. In addition to custom playlists, your PMP will automatically generate playlists based on Artist, Album, and Genre ID3 data.

1. Select PLAYLIST from the Music Mode options and press OK to confirm.
2. Select a playlist and press OK to start playback.

Additional Music Playback Controls

During music playback:

- Press FUNCTION once to access the Playback Controls.
- Playback status information will be shown on-screen.
- The controls described below are in addition to the Standard Playback Controls covered in the Basic Operations > Other Playback Controls > Standard Playback Controls section.

Music Show

View your photo files while playing music at the same time.

1. While you are playing the music you want, press FUNCTION to access the Playback Controls
2. Select the MUSIC SHOW icon and press OK. The photo slideshow will begin.
3. Press ▲ or ▼ to adjust the time interval between photos (3 to 15 seconds).

Please refer to the Photo Mode > Photo Mode Options > Music Show section for information about how to program a Music Show List for use with this feature.

Info

View detailed information about the selected file, if available (e.g., Size, Artist, Album, Length, Codec).

1. Select a file to view information about and press FUNCTION.
2. Select the INFORMATION icon and press OK.

VIDEO MODE

Enter Video mode to play your AVI, MPEG-1, -2, and -4, H.264, and XviD video files.

Video File Browser

Select and confirm the VIDEO icon in the Main Menu. The File Browser that appears will display all available video files in the **"my_videos"** folder.

- Use the Joystick to select a folder and press OK to display its contents. Press STOP / ↑ to return to a previous folder.
- Use the Joystick to select a video file and press OK to play.

VIDEO MENU SCREEN

VIDEO PLAYBACK INFO SCREEN

Refer to the Basic Operations section for basic video playback control information.

VIDEO MODE

Video Mode Options

The Video Mode options are displayed on the left side of the Video Menu screen.

Play All

Play all available video files in sequence.

1. Select PLAY ALL from the Video Mode options and press OK to confirm. Playback of all video files will begin.

Program

Add your favourite video files to a Program List for playback.

1. Select PROGRAM from the Video Mode options and press OK to confirm.
2. Select a video file (or an entire folder) and press ▶ to add it to the Program List. The file or folder will be marked with a number.
3. To remove a marked file or folder from the Program List, select the marked item and press ◀.
4. Press FUNCTION to start Program playback when you have finished adding files to the list.
5. Press STOP / ⤴ to exit Program mode.

Random

Play files in random (shuffled) order.

1. Select RANDOM from the Video Mode options and press OK to confirm.
2. The files will be played in random order and “RND” will appear on the upper-left corner of the screen.
3. Press STOP / ⤴ to exit Random mode.

Last Play

Play the video file that was played last.

1. Select LAST PLAY from the Video Mode options and press OK to confirm.

Video Output

Make sure that the audio cable and the video cable have been properly connected.

1. Press and hold “Function”button to switch video signal between the player and the TV set.
    1. Choose menu SETUP with joystick and press OK (press joystick)

2. Choose menu DISPLAY with joystick and press OK (press joystick)
3. Choose VIDEO OUTPUT with joystick (up/down)
4. Select the video output format with joystick (left/right). Using standard is PAL (Video/S-Video)
5. Press OK (press joystick)
6. Press and hold button FUNCTION for at least 3 seconds. Display will turn black and video output is activated.

2. To get back to normal operation press and hold FUNCTION for at least 3 seconds again.

Additional Video Playback Controls

During video playback:

- Press FUNCTION once to access the Playback Controls.
- Playback status information will be shown on-screen.
- The controls described below are in addition to the Standard Playback Controls covered in the Basic Operations > Other Playback Controls > Standard Playback Controls section.

Size

Change the vertical size of the screen.

1. During video playback, press FUNCTION to access the Playback Controls
2. Select the SIZE icon and press OK.
3. Press ▲ or ▼ to adjust the expand or compress the vertical size of the screen.
4. Press STOP / ⮥ to finish and return to the Playback Control menu.

Zoom

Increase or decrease the magnification level of the video.

1. During video playback, press FUNCTION to access the Playback Controls
2. Select the ZOOM icon and press OK.
3. Press ▲ or ▼ increase or decrease the level of magnification.
   - Use the MOVE control below to pan around a magnified video.
4. Press STOP / ⮥ to finish and return to the Playback Control menu.

Move

Use in conjunction with the ZOOM control to pan around a magnified video.

1. During video playback, press FUNCTION to access the Playback Controls.
2. Select the MOVE icon and press OK.
3. Press ▲ or ▼ to pan the image up or down; press ◀ or ▶ to pan the image left or right.
4. Press STOP / ↕ to finish and return to the Playback Control menu.

PHOTO MODE

Enter Photo mode to view your JPEG photo files.

Photo File Browser

Select and confirm the PHOTO icon in the Main Menu. The File Browser that appears will display all available photo files in the **"my_photo"** folder.

- Use the Joystick to select a folder and press OK to display its contents. Press STOP / ⮥ to return to a previous folder.
- Use the Joystick to select a photo file and press OK to view.

PHOTO MENU SCREEN

Refer to the Basic Operations section for basic photo playback control information.

Photo Mode Options

The Photo Mode options are displayed on the left side of the Photo Menu screen.

Preview

Preview all photo files and folders in “thumbnail” view.

1. Select PREVIEW from the Photo Mode options and press OK to confirm. The Thumbnail Preview screen will appear.
2. Press ◀ or ▶ to select a thumbnail on the current page.
3. Press ▲ or ▼ to go to the next or previous page.
4. Press OK to view a selected photo in full-screen mode. Press STOP / ⤴ to return to the Thumbnail Preview screen.
5. Press STOP / ⤴ to return to the Photo Menu screen.

Slide Show

View all photo files as an automatic slideshow.

1. Select SLIDE SHOW from the Photo Mode options and press OK to confirm. The slideshow will begin.
2. During the slideshow:
   - Press ◀ or ▶ to rotate the picture.
   - Press ▲ or ▼ to go to the previous or next picture.
   - Press FUNCTION to access the Playback Controls.
3. Press STOP / ⤴ to return to the Photo Menu screen.

Refresh

Rescan (refresh) the **“my_photo”** folder for files.

1. Select REFRESH from the Photo Mode options and press OK to confirm.

Music Show

Program a list of photos for use with the Music Show function. The Music Show function allows you to view your photo files while playing music at the same time (please see the Music Mode > Additional Music Playback Controls > Music Show section for more information.

1. Select MUSIC SHOW from the Photo Mode options and press OK to confirm.
2. Select a photo file (or an entire folder) and press ▶ to add it to the Music Show List. The file or folder will be marked with a number.

MUSIC SHOW PROGRAM SCREEN

3. To remove a marked file or folder from the Music Show List, select the marked item and press ◀.
4. Press FUNCTION when you have finished adding files to the list. The PMP will take a few moments to process the Music Show List.
5. The Music Show List is now ready for use. Please see the Music Mode > Additional Music Playback Controls > Music Show for information about how to start Music Show playback.

Last Play

View the photo file that was displayed last.

1. Select LAST PLAY from the Photo Mode options and press OK to confirm.

Additional Photo Playback Controls

During photo playback:

- Press FUNCTION once to access the Playback Controls.
- Playback status information will be shown on-screen.
- The controls described below are in addition to the Standard Playback Controls covered in the Basic Operations > Other Playback Controls > Standard Playback Controls section.

Rotate

Rotate the photo on display.

1. During photo playback, press FUNCTION to access the Playback Controls.
2. Select the ROTATE icon and press OK.
3. Press ◄ or rotate the photo counter-clockwise.
4. Press ► to rotate the photo clockwise.

Zoom

Increase or decrease the magnification level of the photo.

1. During photo playback, press FUNCTION to access the Playback Controls
2. Select the ZOOM icon and press OK.
3. Press ▲ or ▼ increase or decrease the level of magnification.
   - Use the MOVE control below to pan around a magnified photo.
4. Press STOP / ↥ to finish and return to the Playback Control menu.

Move

Use in conjunction with the ZOOM control to pan around a magnified photo.

1. During photo playback, press FUNCTION to access the Playback Controls.
2. Select the MOVE icon and press OK.
3. Press ▲ or ▼ to pan the image up or down; press ◄ or ► to pan the image left or right.
4. Press STOP / ↥ to finish and return to the Playback Control menu.

Slide Duration

Set the time interval between slides.

1. During photo playback, press FUNCTION to access the Playback Controls.
2. Select the SLIDE DURATION icon and press OK.
3. Press ▲ or ▼ increase or decrease the time between slides (in seconds).

RADIO MODE

Enter RADIO mode to listen to FM Radio broadcasts.

Earphones (or headphones) must be connected to the PMP's Headphone jack for Radio operation for use as an antenna.

Radio Station Preset Browser

Select and confirm the RADIO icon in the Main Menu. The Radio Station Browser that appears will display all 20 radio station presets.

- Press ◀ or ▶ to decrease or increase the selected station preset number.
- Press + or − to adjust the volume level.
- Press STOP / ⮥ to exit Radio mode.

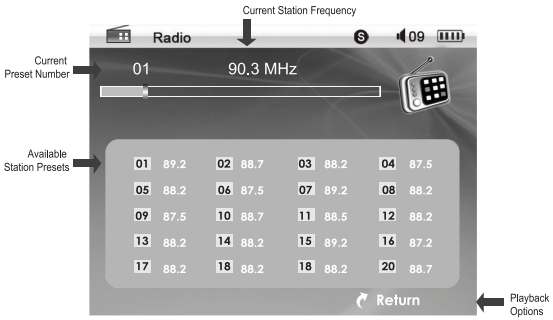

RADIO STATION PRESET SCREEN

Radio Playback Controls

During radio playback:

- Press OK once to access the Radio Playback Controls.

Preset

Automatically save FM broadcasts in reception range to the Station Preset list. Previously saved stations will be overwritten.

1. During radio playback, press OK to access the Playback Controls.
2. Select the PRESET icon and press OK.

Manual Search Backward/Forward

Tune automatically to station broadcasts within reception range.

1. During radio playback, press OK to access the Playback Controls.
2. Select the MANUAL SEARCH BACKWARD or MANUAL SEARCH FORWARD icon and press OK.
   - Select “Backward” to scan to the next lowest station broadcast within reception range.
   - Select “Forward” to scan to the next highest station broadcasts within reception range.

Step Scan Backward/Forward

Manually tune to station broadcasts.

1. During radio playback, press OK to access the Playback Controls.
2. Select the STEP SCAN BACKWARD or STEP SCAN FORWARD icon and press OK.
   - Select “Backward” to tune to the next lowest station frequency.
   - Select “Forward” to tune to the next highest station frequency.

Stereo/Mono Switch

Toggle between Stereo and Mono reception mode. Switch to Mono mode to tune to stations with a weak broadcast signal.

1. During radio playback, press OK to access the Playback Controls.
2. Select the STEREO/MONO SWITCH icon and press OK.

BROWSER MODE

Enter Browser mode to manage your media library on your PMP.

File Browser

Select and confirm the BROWSER icon in the Main Menu. The File Browser that appears will display all files on your PMP.

- Use the Joystick to select a folder and press OK to display its contents. Press STOP / ⮥ to return to a previous folder.
  - Select the “hd” folder to view all files on the PMP’s hard drive.
  - Select the “cf” folder (if available) to view all files on the optional compact flash card.
- Use the Joystick to select a compatible file and press OK to play it.

FILE BROWSER SCREEN

Browser Mode Controls

The Browser Mode Control options are displayed on the left side of the Browser Menu screen.

Copy

Copy files and folders to another location.

1. Select COPY from the Browser Mode options and press OK to confirm.
2. Select a file (or an entire folder) and press ▶ to add it to the Copy List. The file or folder will be marked with a number.

3. To remove a marked file or folder from the Copy List, select the marked item and press ◄.
4. When you have finished adding files to the list, navigate to the target folder.
5. Press FUNCTION. The PMP will copy the files/folders in the Copy List to the target folder.

Delete

Delete files and folders.

1. Select DELETE from the Browser Mode options and press OK to confirm.
2. Select a file (or an entire folder) and press ► to add it to the Delete List. The file or folder will be marked with a number.
3. To remove a marked file or folder from the Delete List, select the marked item and press ◄.
4. Press FUNCTION when you have finished adding files to the list. The PMP will ask you to confirm deletion. Select “Yes” to delete the marked files and folders.

Move

Move files and folders to another location.

1. Select MOVE from the Browser Mode options and press OK to confirm.
2. Select a file (or an entire folder) and press ► to add it to the Move List. The file or folder will be marked with a number.
3. To remove a marked file or folder from the Move List, select the marked item and press ◄.
4. When you have finished adding files to the list, navigate to the target folder.
5. Press FUNCTION. The PMP will move the files/folders in the Move List to the target folder.

Refresh

Rescan (refresh) the current folder for files.

1. Select REFRESH from the Browser Mode options and press OK to confirm.

SETUP MODE

Enter Setup mode to adjust the internal settings of your PMP.

To adjust the settings:

- Press ▲ or ▼ to select a setting.
- Press ◀ or ▶ to adjust the selected setting.
- Press OK to confirm when necessary.

Setup Menu

The Setup Menu contains 5 options: Language, Display, Sound, System, and Power.

- Press ◀ or ▶ to select a Setup option and press OK to confirm.

Language

Set the language that the menus appear in.

- The language options are: English, French, Dutch, Portuguese, Spanish, and Korean.

Display

Set the Display options.

- Video contrast 16
- Video brightness 15
- Video saturation 15
- LCD backlight 1
- TV H size 25
- TV V size 25
- Video output: NTSC,PAL,480P,720P,1080I.

SETUP MODE

Sound

Set the Sound options.

- Volume 15
- Balance 0
- 3D effect 10
- Equalizer : Nomal, Rock, Pop Jazz, Classical, Dance, Heavy, Disco, Soft, Live, Hall.
- Update mp3 paintlist file: Set update function on/off

System

Set the System options.

- HDD maintainance: Select YES/ NO
- CF Card: NA
- Restore Factory Setting: Select YES/NO
- F/V Version G2 060915 : Upgrade Select YES/NO

Do not interrupt your PMP during HDD maintenance or during Firmware Upgrades for any reason.

Power

Set the Power options.

- Backlight Off: Off, 1 Min, 2 Min, 3 Min
- Slide show: 3 seconds to 15 seconds
- Power off: Off, 3 Min, 5 Min, 7 Min, 10 Min
- Backlight and Key Lock: Off, 10 seconds, 30 seconds, 60 seconds

CABLE CONNECTION

To use your XEMIO-3530 to output audio and video to an external home theater system, use the connections diagrammed below.

Composite Video or S-Video Output

When using the Composite Video or S-Video output connection:

1. Enter SETUP mode from the Main Menu.
2. Select the DISPLAY option.
   - For NTSC television or monitors, adjust the Video Output setting to **NTSC (Video/S-Video)**
   - For PAL television or monitors, adjust the Video Output setting to **PAL (Video/S-Video)**

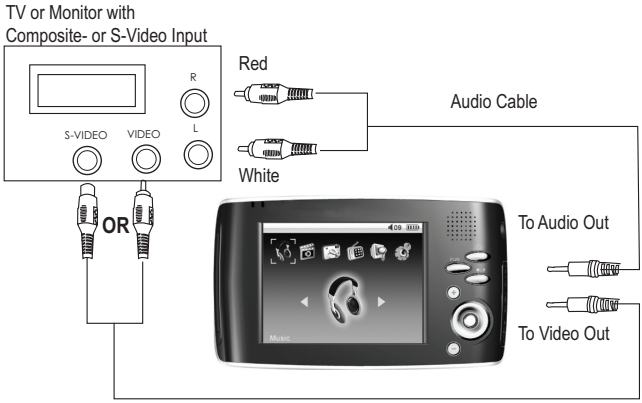

S-Video **or** Composite Video Cable

Component Video Output

The XEMIO-3530 can also output high-definition video when using a mini-jack to component video adapter cable (not included).

When using a Component Video output connection:

1. Enter SETUP mode from the Main Menu.

2. Select the DISPLAY option.
   - For Enhanced-Definition capable television or monitors, adjust the Video Output setting to **480P (YPbPr)**
   - For High-Definition capable television or monitors, adjust the Video Output setting to **720P (YPbPr) or 1080i (YPbPr)**

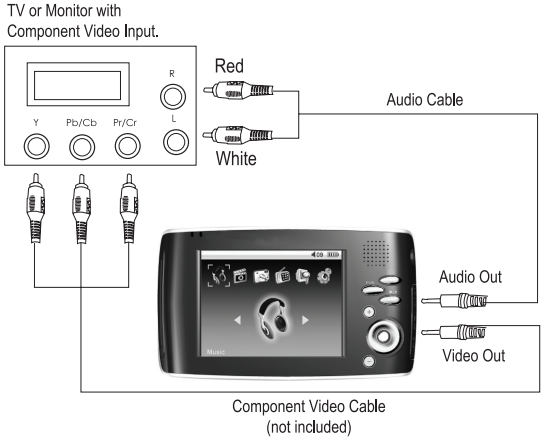

Your television or monitor must be able to support resolutions of 480P to 1080i, and a component video cable is required to use these video output modes. A component video cable is not included; please visit your local electronics retailer to obtain this cable.

Audio-Only Output

To output audio only, follow the connection diagrams above but do not connect the Video cables.

COMPUTER CONNECTION (USB)

Connect the XEMIO-3530 to a computer with the USB 2.0 cable provided to:

- Transfer files to and from your PMP
- Perform basic file management functions.

USB Driver Installation (Required for Windows 98 SE Only)

It is not necessary to install the USB driver if your computer is running Microsoft Windows ME/2000/XP or newer, or Macintosh OS X. Computers running these operating systems will recognize your PMP automatically when connected.

If your computer is running Windows 98 SE:

1. Insert the Installation CD into your computer's CD or DVD drive. Make sure to place the mini-CD in the center, recessed well of the drive tray.
2. Navigate to MY COMPUTER and double-click on the CD/DVD drive icon (usually "D:").
3. Double-click on the folder "Win98 USB Drivers" and then on the folder "english".
4. Double-click on the SETUP icon (SETUP.EXE) to start the USB driver installation program.
5. Follow the on-screen instructions to complete the installation and then restart your computer.

Mini-CDs should only be used in normal tray-loading CD/DVD drives. Mini-CDs may be used in slot-loading drives with the proper adapter; please contact your computer or drive manufacturer for more information.

Connecting to a Computer

Connect the PMP to your computer with the supplied USB cable. Upon connection:

- Your computer will automatically recognize the PMP. An icon representing your PMP will appear as a "Removable Disk" when you open "My Computer".
- It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

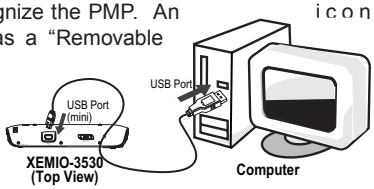

Transferring Files

The USB 2.0 High-Speed connection makes it easy to transfer music, video, photo, and text files (or any other data) quickly between the PMP and your computer. Simply use the PMP as you would a floppy disk using basic operating system commands.

If you need further assistance with transferring files, please refer to your operating system's instruction manual or on-screen help. If you are using media management software such as iTunes, Winamp, or Windows Media Player, please refer to their documentation for support.

Do not disconnect or otherwise interrupt the PMP during transmission - this could damage or corrupt the PMP's firmware or your files. If the PMP is accidentally disconnected and is not working properly, reset your PMP (see the Powering Your PMP section for details).

Microsoft Windows

1. Double-click the "My Computer" icon on your desktop and then double-click the XEMIO-3530 icon (Removable Disk).
2. Drag your media files (or other files) to the Removable Disk.
   - You may choose to use folders/subfolders to organize your media and data.

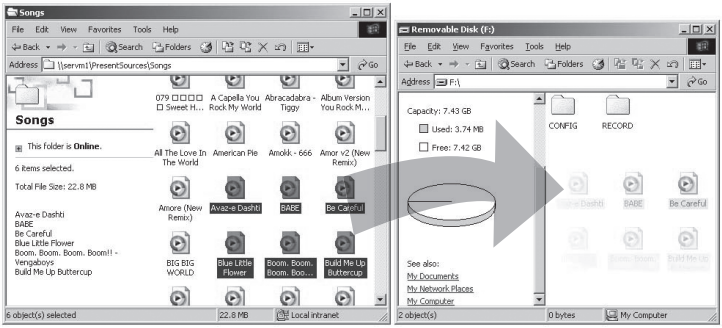

Macintosh OS X

1. Open a Finder window. Locate the files you would like to transfer from your computer. Select the files/folders with the mouse and press APPLE-C (copy) on the keyboard.
2. Click on the Removable Disk icon located on the left side of the finder window. The computer will display all files and folders currently stored in the PMP.
3. Press APPLE-V (paste) on the keyboard to transfer the files you selected in Step 1 to the PMP.

Disconnecting from a Computer

Disconnect your PMP as instructed below to prevent data loss or file/firmware corruption.

Microsoft Windows

1. Double-click the green arrow in the taskbar located on the lower-right side of the computer screen (Safely Remove Hardware).
2. **Safely Remove Hardware:**
   Select “USB Mass Storage Device” from the list that appears and then click on “Stop”.
   Stop a Hardware Device: Select “USB Mass Storage Device” from the list that appears and then click on “OK”.
   Select “USB Mass Storage Device” from the list that appears and then click on “OK”.
3. When the “Safe to Remove Hardware” window appears, click the OK button and disconnect the USB cable from the PMP and your computer.

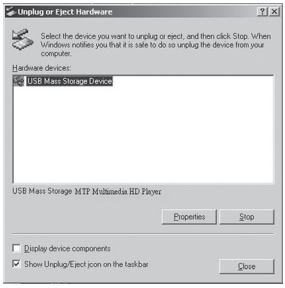
Unplug or Eject Hardware
Select the device you want to unplug or eject, and then click Stop. When Windows notifies you that it is safe to do so unplug the device from your computer.
Hardware devices:
USB Mass Storage Device
USB Mass Storage MTP Multimedia HD Player
Properties
Stop
Display device components
Show Unplug/Eject icon on the taskbar
Close

Macintosh OS X

1. On the left side of the Finder window, identify the appropriate Removable Disk icon.
2. Click on the “Eject” arrow on the right of the Removable Disk icon.
3. Disconnect the USB cable from the PMP and your computer.

RESTORE & FIRMWARE UPGRADES

From time to time, Lenco may release firmware updates to improve the performance of the XEMIO-3530 or to add additional features. Please check the Lenco website periodically at www.lenco.eu to see if new firmware has been released for your PMP. If you are experiencing abnormal behavior with your PMP, you may choose to restore (format) your PMP before updating its firmware.

Restoring Your PMP (Format)

1. Connect the XEMIO-3530 to a computer using the supplied USB cable.
2. On the computer, locate the Removable Disk icon that corresponds to the XEMIO-3530.
3. Right-click on the Removable Disk icon and select Format.

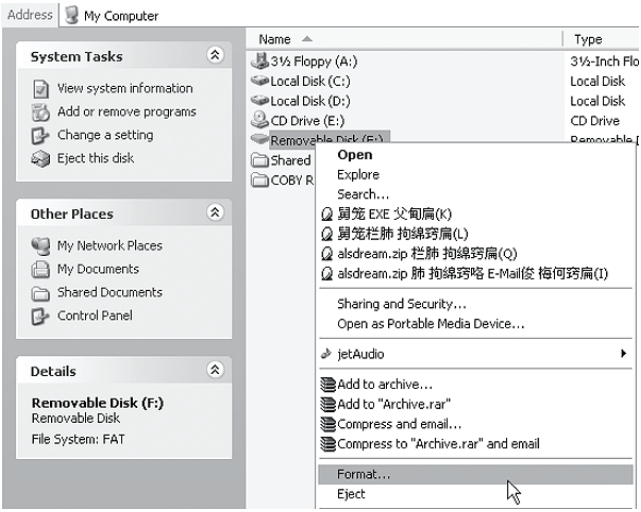

4. A dialog box will appear on-screen. Change the settings to format the PMP as a FAT16 drive, and then click the START button to begin the formatting process.
5. When the formatting process is complete, disconnect the USB cable from the PMP.

6. Press and hold ⏻ / RESET to turn the PMP off, and then turn it back on.

Formatting your PMP will erase all of your data from it (including musics, recordings, movies, photos). Make sure to copy and back up the data on your PMP that you do not want to lose prior to formatting.

ABOUT DIGITAL MUSIC FILES (MP3s)

What is an MP3?

MP3 (short for MPEG-1 Audio Layer 3) is a compressed digital audio file. MP3 files can deliver audio at a quality that nearly matches compact discs (CDs), but are about one-tenth the size of CD-audio.

How can I play an MP3?

MP3s may be played on a wide variety of devices. Devices that may play MP3s are: MP3 Players, Portable Media Players (PMPs), Personal Computers, and DVD Players.

What is an MP3 Player?

MP3 Players are devices (usually portable) that can play back MP3 audio files. Although they are called “MP3 Players”, most can play other types of digital audio files (e.g., WMA, OGG, WAV, or AAC). Since modern players can play more than just MP3s, they may also be referred to as Digital Audio Players.

Many MP3 players include other functions such as an FM Radio, Voice Recorder, Photo Viewer, or Video Playback.

Where Can I Get MP3/WMA files?

You may either download MP3 or WMA files from a music download or subscription service, or you may create (“rip”) your own MP3/WMA files.

Downloading MP3/WMA Files

There are many online stores or subscription services you may choose to purchase and download music from. Most of these stores employ Windows Media Digital Rights Management (WMDRM) and offer encrypted WMA files for download. Due to the encryption, these files cannot be played on all MP3 Players.

Please note that music purchased from Apple’s iTunes music store employs their proprietary Fairplay-encrypted AAC; purchased iTunes music cannot be played on any MP3 player other than Apple’s.

What is Encryption?

Encryption is a way of protecting media with a unique Content ID for the purpose of data security. In order to access the encrypted media, End Users must acquire

a license key and that allows for decryption and playback. Without this license key, encrypted media will not play

Creating MP3/WMA Files

You can create your own digital audio files for personal use by "ripping" your music CDs and converting them to an MP3, WMA, or OGG.

To create your own MP3 files, you will need a computer with an application installed that can rip and encode MP3s or WMAs. Windows Media Player 10 is one software application made available by Microsoft that will rip and convert CDs to an MP3 or WMA file.

- Ripping a CD copies and converts (encodes) the music from the CD to a compressed digital audio file.
- Converting to MP3 and/or deselecting the "Copy Protect Music" option will ensure the widest playback compatibility of your music files.
    - Please visit www.microsoft.com for more Windows Media Player information and support.

How Do I Rip My Music CDs Using Windows Media Player 10?

1. Start the Windows Media Player 10 (WMP10) application. (If it is not installed on your computer, you will have to download and install the program from www.microsoft.com).
2. nsert your music CD into your computer's CD-ROM drive.
3. Click the "Rip" tab.
4. Set the appropriate options, and then click "Rip Music" to begin the ripping process.
5. The converted file will be saved to your "My Music" folder unless you have specified otherwise.
    - Please visit www.microsoft.com for more Windows Media Player information and support.

How Do I Transfer MP3/WMA Music Files to my MP3 Player?

When your MP3 Player is connected to a computer, you may transfer music files to your MP3 player using your operating system's basic file management commands (i.e., copy-and-paste or drag-and-drop). Please refer to your computer's documentation for more information and support.

ABOUT DIGITAL MUSIC FILES (MP3)

If you have Windows Media Player installed on your computer (or another, similar program), you may choose to use its media management functions to transfer your files.

- Lenco MP3 Players with USB-MTP support will enable the advanced media management functions of Windows Media Player.
- Please visit www.microsoft.com for more Windows Media Player information and support.

How Do I Play Music Purchased Online on my MP3 Player?

Music files you have downloaded from online stores (e.g., Napster, MusicNow, URGE, Walmart.com, and Y! Music) are encrypted with WMDRM. *These files will only play on MP3 players with WMDRM support.*

In addition to an MP3 player with WMDRM support:

- To transfer and play **purchased** music, you will need Windows Media Player 9 or newer.
- To transfer and play **subscription** music, you will need Windows XP and Windows Media Player 10 or newer.

For more information and support, please refer to the documentation provided by the online store or subscription service from which you purchased your music.

Common Errors Associated with DRM-Encrypted Music Files

Why is my MP3 player not recognizing the files I have transferred to it?

If your MP3 Player does not display or recognize the files you have transferred to it, the files may not be of a type supported by the player. Make sure your music files are in MP3 or WMA format.

Why is my MP3 player skipping a file?

The file may be corrupt. Download or transfer the file to your player again.

The file that is being skipped may be DRM-encrypted. If your license has expired, you will not be able to play this file.

- If you believe your license has expired prematurely, please contact the store or service from which you have downloaded this file for support.

ABOUT DIGITAL MUSIC FILES (MP3)

Why is my MP3 player displaying the error message “NO AUTHORITY”?

The player may be trying to read a file that is DRM-encrypted. If your license has expired, you will not be able to play this file.

- If you believe you are receiving this message in error, please contact the store or service from which you have downloaded this file for support.

TROUBLESHOOTING

If you have a problem with this player, please read the troubleshooting guide below and check our website at www.lenco.eu for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

The player does not turn on.

- The battery level may be too low. Try charging the player or operate the player on AC power.
- Ensure that the Lock switch is disengaged.
- Reset the player (use a pin to press the Reset key on the bottom of the player) and try again.

The player does not turn charge when connected to a computer (USB charge).

- Reset the player (use a pin to press the Reset key on the bottom of the player) and try again.

There is no sound during playback.

- Check the volume level.
- Ensure that the headphones are attached securely to the player.

The sound quality of the music is poor.

- Try playing the file on your computer. If the sound quality is still poor, try downloading the file again or re-encoding the file yourself.
- Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. The minimum recommended bitrate is 128kbps for MP3s and 96kbps for WMAs.
- Ensure that the headphones are attached securely to the player.

The buttons do not work.

- Ensure that the battery is charged or that the player is operating on AC power.
- Ensure that the Lock switch is disengaged.

The player will not play my music file.

- Ensure that the file is in a compatible format (MP3, WMA, or WAV).
- The file may be copy-protected. This player cannot play copy-protected files.

TROUBLESHOOTING

The LCD characters are corrupted.

- Ensure that the correct language has been selected.

The player will not play my video file.

- Ensure that the video file will play on your computer using Windows Media Player 10. If the file works on the computer, use the same computer to convert the video to a compatible format.

I cannot transfer files to the player.

- Ensure that your computer is running a supported operating system.
- If you are running Microsoft Windows 98 SE, ensure that the USB driver has been properly installed.
- Ensure that the supplied USB cable is securely attached to the player and the PC, or try using another USB cable.
- If you have connected the player through a USB hub, try connecting the player directly to your computer.
- Ensure that the player's memory capacity is not full.

The player has malfunctioned.

- Reset the player (use a pin to press the Reset key on the bottom of the player) and try again.
- Try updating the player's firmware. Please refer to the Restore & Firmware Upgrades section of this manual for detailed instructions.

SPECIFICATIONS

Display Type	3.5” TFT LCD
Display Resolution	320 x 240
Memory	30GB Hard Disk CF Card Reader for Expanded Memory Capacity
Audio Format Support	MP3, WMA, OGG
Video Format Support	MPEG-1, MPEG-2, MP4 (NERO), XviD, DAT (VCD), M-JPEG and VOB (DVD)
Photo Format Support	JPEG (8MP maximum)
FM Frequency Range	87.5 - 108.0MHz
Song Info Support	ID3, LRC
PC Interface	USB 2.0 High-Speed
Plug and Play Support	Windows 98SE/2000/ME/XP or newer Mac OS X
Audio Output	3.5mm Stereo (Headphone) 3.5mm Stereo Integrated Speaker
Audio Input	Integrated Microphone
Video Output	Composite Video
Power Supply	DC 5V: Rechargeable Lithium-ion Battery 100-240V AC Adapter
Unit Dimensions	5.18” x 3.09” x 0.96” (WHD)
Weight	8.1 oz

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

Specifications and manual are subject to change without prior notice.